

The **iWAX** brand aims to provide multifunctional tools for cosmetic wax and paraffin treatments, such as modern wax heaters for depilation. It focuses on interesting design, versatility of products and ease of use, so that the **iWAX** range is aimed at both professional and home use.




depilation accessories and devices

Universal heater for all types of wax

The ergonomic **iWax 100 wax heater** allows you to quickly and effectively prepare the products necessary for depilation. The device is **safe and intuitive to use**, and guarantees **hassle-free heating of hard or soft wax**. Suitable for canned, cubed and pearl products.



control diode and click system

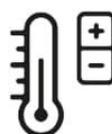

*Temperature adjustable
from 45 to 120 °C*

Practical facilities for the convenience of depilation

The heater is extremely intuitive to use – using the knob, you can **easily adjust the heating temperature**. The indicator light signals the operating status, and **the click system** informs about turning the device on/off by a characteristic clicking sound. The transparent lid in shades of black allows you to **control the state of wax melting**, while preventing the accumulation of impurities inside the device. Small openings **prevent overheating**, guaranteeing the possibility of ventilation. **The aluminium bucket** designed for melting hard wax is equipped with a handle, which makes it easy to remove the container. This makes the device **easier to keep clean**.

Modern, timeless design

The simplicity and small dimensions that characterize the iWax 100 wax warmer make it **fit perfectly into any interior** without overwhelming it. The minimalist design gives the device an **elegant, timeless character**, and the use of durable plastic in shades of black ensures **easy cleaning**. The lightness of the device makes it easy to transport or carry.

wax heating

For heating the wax in pearls, cans and cubes



A set of cosmetic gloves – free of charge!

Disposable foil gloves will prove themselves in a variety of procedures, being a **great protection** for the hands both against dirt and moisture, as well as against the substances used. They help maintain **high hygiene standards**. They will also be useful **for paraffin treatments**, effectively maintaining the sauna effect during them. Transparent gloves are universal and fit any hand. The package contains **100 pieces**.

How to use the wax heater?

1. Remove the lid from the device.
2. Place the wax refill in the heater, and then connect the device to the power supply.
3. Turn the knob to ON – the red light indicates that the device has started working.
4. The wax melts in 15-30 minutes, depending on the temperature setting and the amount of wax.
5. After the wax is melted, set the knob to the middle position so that the temperature remains constant. During the operation of the device, the indicator light will go off and come on again to keep the wax at the right temperature. Always check the temperature of the wax before applying it to your skin to avoid burns.
6. When you are done, turn off the device and wait for it to cool down. After that, clean it – you can use a special product designed for cleaning wax devices.